

REUSABLE COMMUNITY MASK (LEVEL 3)

COVID-19 - SOCIAL LINE

PRODUCT SPECIFICATION

PRODUCT

Individual protection mask for community use.

General Purpose Mask

Internal Reference 23000 /1

USE

These masks are intended to serve as a barrier mask to complement the protection measures and the rules of social distance, never overriding the protection measures and rules of social distance, which are essential for the control of COVID-19.

Additionally, these masks are not for use by healthcare professionals in the exercise of their functions, nor are they a medical device and do not comply with the regulation of surgical masks (Regulation EU / 2017/745), nor of PPE (Regulation EU / 2016 / 425).



COMPOSITION

- 1 Layer - Jersey 100% Cotton 230grs/m2

Approved material for masks intended for use within the scope of COVID-19, based on the CITEVE test report No.14469/2020, using the "Approved COVID-19 Masks" seal.

DESCRIPTION

- Reusable mask
- Breathable mask
- Ear elastics
- Nasal adjustment

Face masks help to prevent particles expelled by the user from reaching others as well as the environment and protect against exposure to third party body fluids.

REUSABLE COMMUNITY MASK (LEVEL 3)


COVID-19 - SOCIAL LINE

CARE INSTRUCTIONS



The material that makes up the product supports 25 washes until the beginning of the loss of some of its protective properties. However, due to the influx of tests at Citeve, the mask is only certified for 20 washes, we are awaiting certification up to 25 washes.

DIAGRAM

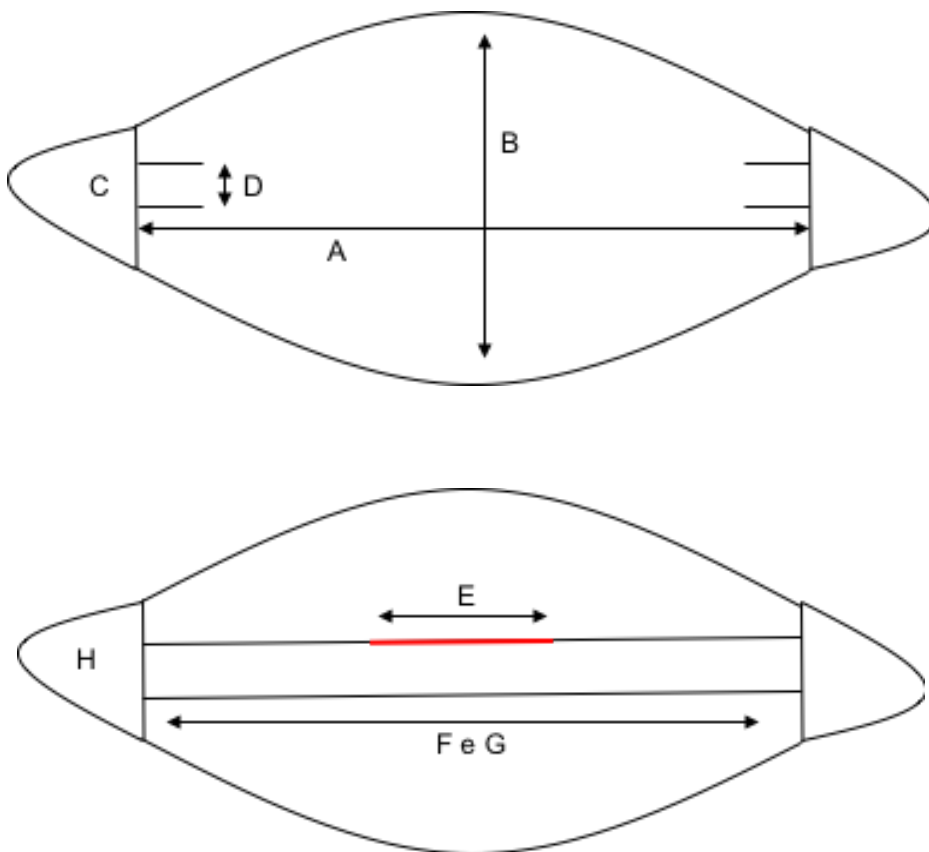

DESCRIPTION:

- A (Width) - 22 cms
- B (Height) - 11 cms
- C (Lateral) - 5.5 cms
- D (Pleats) - 2 x 1 cm
- E (Nasal adjustment) - 10 cms
- F (Top flap) - 4.5 cms
- G (Bottom flap) - 4.5 cm
- H (Elastics) - 18 cms

REUSABLE COMMUNITY MASK (LEVEL 3)

COVID-19 - SOCIAL LINE

PHOTOGRAPHIC REPRESENTATION

FRONT



LATERAL



EXTERIOR



INTERIOR



REUSABLE COMMUNITY MASK (LEVEL 3)

COVID-19 - SOCIAL LINE

INFORMATION TO BE PROVIDED TO THE FINAL CONSUMER *

* in addition to the above

Mask category

- Level 3: masks intended for use by individuals in the context of their professional activity or in authorized outlets in the context of confinement, namely in interior spaces with multiple people.

Manufacturer or supplier identification

Fabrica de Malhas Tiva Lda
Rua da Estrada, 987, Abade de Neiva, 4705-006 Barcelos

Brand - (under development)

Batch Number -

Composition

Jersey 100% Cotton

Size identification

One size

Use Instructions:

- This mask should be used as a complement to the recommended protection and hygiene measures and to the rules of social distance, which are essential for the control of COVID-19. For more information, see <https://covid19.min-saude.pt>.

- The reusable mask must be handled correctly. The following instructions are recommended for the correct use of the mask, according to DGS Guideline (nº 019/2020 of 03/04/2020):

- a) Hand hygiene, with soap and water or an alcohol-based solution, before putting on the mask;
- b) Putting on the mask with the inner face facing the face, and the outer face facing out;
- c) Adjusting the rigid end of the mask to the nose, covering the mouth, nose and chin with the mask, making sure that there are no spaces between the face and the mask;
- d) The mask should not be touched while it is in use; if this happens, hand hygiene must be performed immediately;
- e) It is recommended to use each mask for a maximum period of 4 hours a day, and the mask should be replaced with a new one at the end of that period or as soon as it is wet. The removed mask must be washed before being reused;
- f) If you accidentally get your mask wet, replace it with a dry one as soon as possible. The wet mask must be washed before being reused;
- g) The mask must be removed from the back (not touching the front of the mask), holding the ties or elastic bands;
- h) The mask must be placed individually in a closed plastic bag, until it is placed in the washing machine;
- i) A new hand hygiene must be performed at the end of the use and handling of the mask.

REUSABLE COMMUNITY MASK (LEVEL 3)


COVID-19 - SOCIAL LINE

- The mask must be washed before reuse, after the number of washing cycles indicated in the information leaflet, which must be at least 5 cycles.


- The protection of the mask is only guaranteed if you follow the cleaning and maintenance instructions that follow:

- The mask must be stored in a dry environment and protected from potential contamination.
- The mask must be washed before its first use.
- In case of defect or damage do not use the mask, replace it with another one.
- At the end of the mask's life cycle, you must wash the mask under the conditions defined in the "conservation and cleaning" section and after washing it must be discarded as non-hazardous textile waste. If you choose not to wash the mask, you should discard it as biological waste.

Pictogram of mask placement

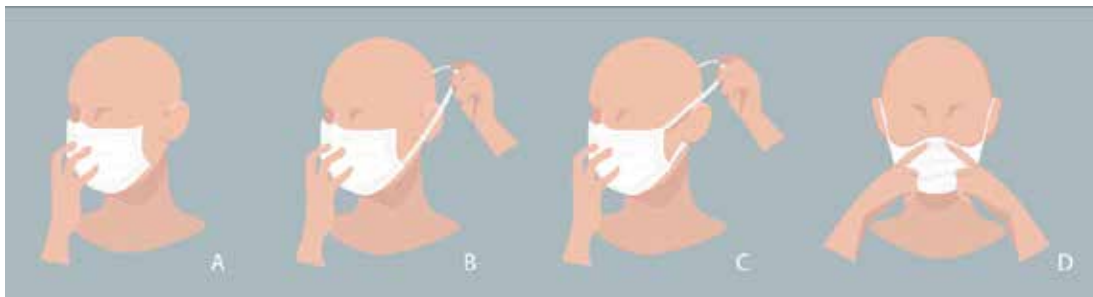

Pictogram of mask removal

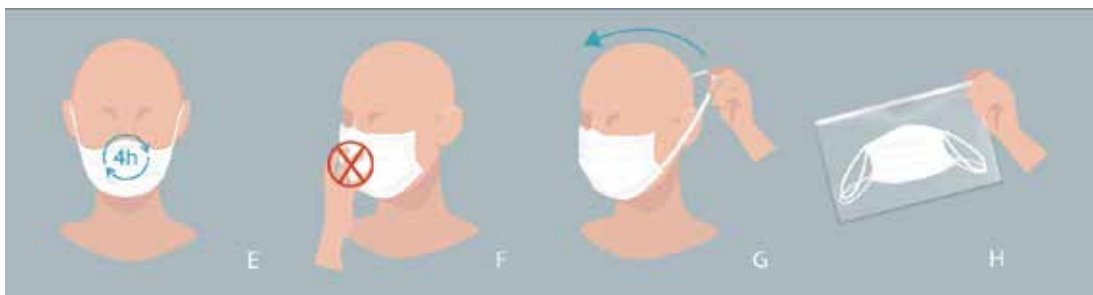

Inner and Outer faces Identification

- Identification on the mask of which the inner and outer faces (through a feature that leaves no doubt to the end user).

Service life indication

- Maximum number of washing cycles in which the protective performance of the mask is guaranteed;

Identification of conservation and cleaning conditions

- The masks must be washed using a normal wash cycle at 60 ° C (6N household washing, according to NP EN ISO 6330: 2012) with detergent, after each use. The user must ensure that the mask is dry before use.

REUSABLE COMMUNITY MASK (LEVEL 3)

COVID-19 - SOCIAL LINE

Care Label Symbology



Use Limitations

- "This device is not a medical device. It does not comply with the regulation of surgical masks (regulation EU / 2017/745) or of personal protective equipment (regulation EU / 2016/425) ".
- The mask should be used very dry after washing. The wet / damp mask decreases the protection of the mask.
- The mask can only be used by someone else after washing.
- If you accidentally get the mask wet, replace it with a dry one as soon as possible. The wet mask must be washed before being reused.
- At the end of the recommended daily use or whenever you return home, the mask must be washed before being reused.